

## How to understand the Intermec printer PM43/43C configuration structure?

Information

**Question/Problem** How to understand the Intermec printer PM43/43C configuration structure?

**Resolution** **PM43 Configuration Structure**



PM43	A	0	0	NA	00	0	0
Model	Version	UI + UI Language 0 = Icon (One Button) 1 = Color Touch 2 = Icon – NE Asia 3 = Touch – NE Asia 4 = Icon – China ONLY 5 = Touch – China ONLY	LAN 0 = No LAN Special 1 = LAN 2 = WiFi + BT	I/O Option 1 00 = None 01 = Parallel 04 = USBX2 NA = RFID NA EU = RFID EU IL = RFID Israel CN = RFID China (See complete Country List)	I/O Option 2 00 = None 01 = Parallel 2-3=Industrial Special. 04 = USBX2	Option 1 0 = No Option 1 = LTS 3 = Cutter Special 4 = Rew. + LTS 5 = Full Batch	Hanger, TL, RTC 0 = Fixed 1 = Fixed + RTC 2 = Fixed + TL R 3 = Rotating 4 = Rot. + RTC 5 = Rot. + TL RT

**PM43C Configuration Structure**



PM43c	A	0	0	0	EU	0	0
Model	Version	UI + UI Language 0 = Icon 1 = Color Touch 2 = Icon – NE Asia 3 = Touch – NE Asia 4 = Icon – China ONLY 5 = Touch – China ONLY	LAN 0 = No LAN Special 1 = LAN 2 = WiFi + BT	Door Options 0 = Long Door 1 = Short Door 2 = Dome Door 3 = Long Door + Front Access 4 = Short Door + Front Access 5 = Dome Door + Front Access	I/O Option 2 00 = None 01 = Parallel 2-3=Industrial Special. 04 = USBX2 EU = RFID EU NA = RFID NA	Option 1 0 = No Option 1 = LTS 3 = Cutter Special 4 = Rew. + LTS	Hanger, TL, RT 0 = Fixed 1 = Fixed + RTC 2 = Fixed + TL R 3 = Rotating 4 = Rot. + RTC 5 = Rot. + TL R

**Product Category** Printing

**Applies To**

- Printers Hardware: PMxx

**Article Number** 000037575

**Article Currency** USD

Statistics

**Created Date** 3/18/2015 3:16 PM

**First Published  
Date** 2/17/2015 8:26 AM

**Language** English