

ULTRA-LIGHT NOISE-CANCELLING BLUETOOTH HEADSET

BlueParrott M300-XT

Engineered for superior calls
in high-noise environments.



M300-XT

Engineered for superior calls in high-noise environments
Ultra-light noise cancelling Bluetooth® headset

Light, discreet design

Just 0.7 oz / 20 g
for all-day comfort

Connect to 2 Bluetooth devices

For more flexibility

All-day conversations

Up to 14 hours of talk time



Customizable BlueParrott Button™

Program for mute,
speed dial or Push-to-Talk

Warranty

Two-years Europe.
One-year rest of the world.

Easy to adjust

Wear on right or left ear

Built to last

IP54-rated protection
against dust and moisture

Walk and talk

Roam up to
300ft/100m from paired
Bluetooth devices

Secure and comfortable fit


With 3 EarGels in
different sizes

USB-C charging

For added convenience

Blocks out 80% of background noise

2 microphones for crystal-clear calls

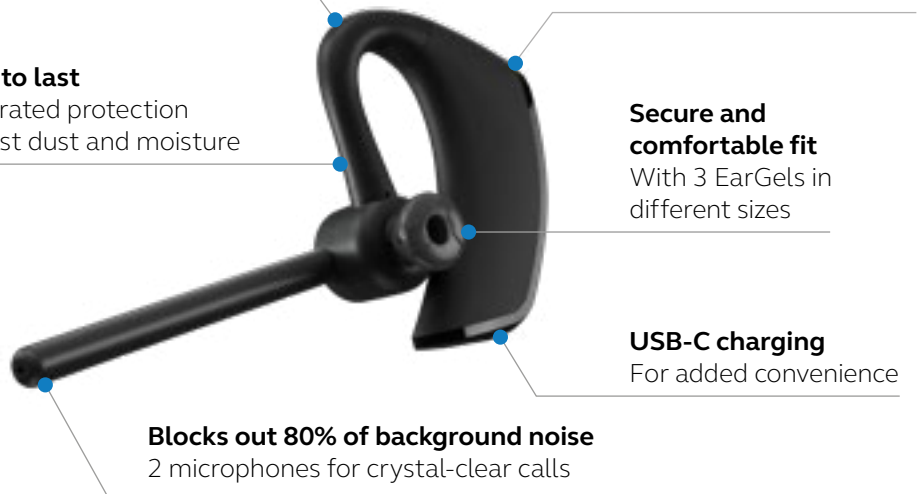

HOW TO USE

Multi-Function Button (MFB)

Power on/off (hold)
Answer/end call
Reject call (hold)
Voice assistant
Pairing mode (hold when off)


Volume up

Volume down




Customizable BlueParrott Button

Options include:
Mute
Speed dial
Push-to-Talk

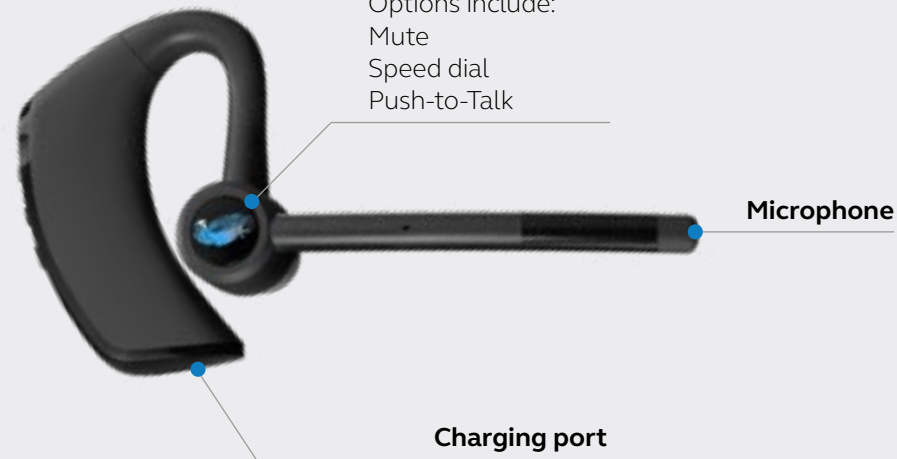

HOW TO PAIR

Your BlueParrott M300-XT uses Bluetooth connectivity and can be paired to any compatible Bluetooth device.

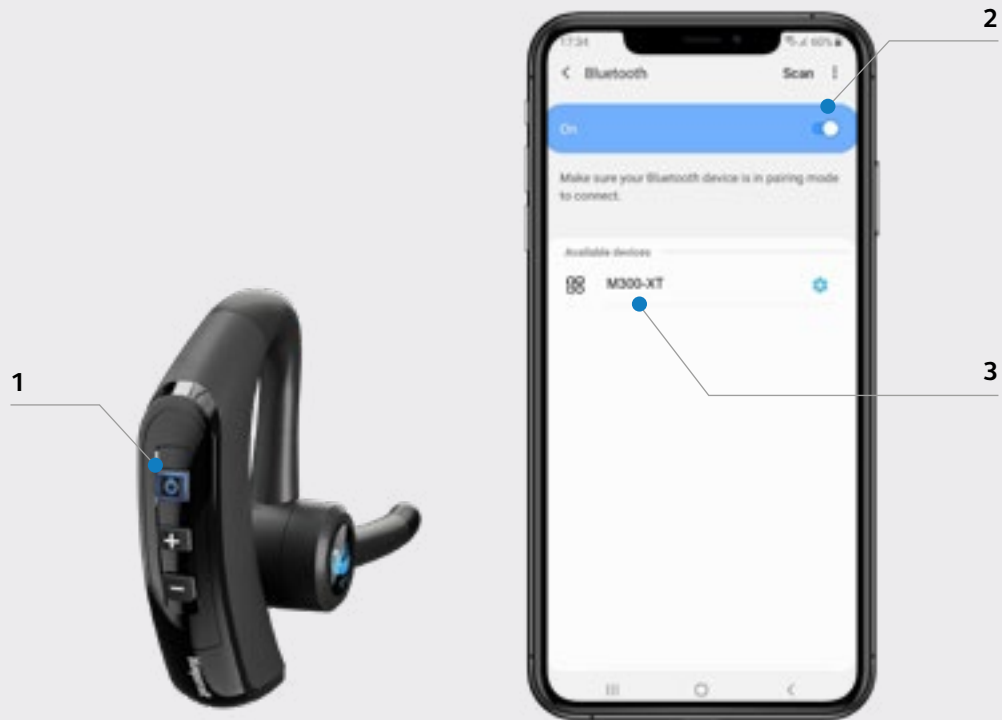

First time pairing

1

Turn on (hold 1 sec)
It's now in pairing mode.

2

On your mobile device,
turn Bluetooth on.

3

Select M300-XT from the list of
available Bluetooth devices. You
will then hear the voice prompt
"Your headset is connected."

Further pairing

1. Ensure M300-XT is turned off
2. Press Multi-Function Button for 6 secs until it flashes blue and red and you hear the voice prompt "pair mode."
3. Follow steps 2 and 3 as above.

HOW TO CUSTOMIZE THE BLUEPARROTT BUTTON

The BlueParrott Button works as a mute button out of the box but can be changed to access to Push-to-Talk or speed dial instead.



BlueParrott App

The ultimate companion for
your BlueParrott headset

Push-to-Talk

Speed dial

More (access
2nd paired
mobile device
and check
battery levels)

Mute

1

Download the
BlueParrott App from
the Apple App store
or Google Play

2

Open the App
and Select
'BlueParrott Button'
in the menu

3

Select the feature
you wish to enable
(mute is set as
default)

4

If selecting
Push-to-Talk,
select your
preferred service.

5

An on-screen
notification will
confirm your
selection

HOW TO WEAR

It is important to wear the headset with the correct EarGel size to get the most comfortable and secure fit. The medium EarGel will fit most people; however, if it does not feel comfortable, try a different EarGel size. The EarGel is designed to sit within the outer ear, not in your ear canal.



Wear on either ear

The M300-XT can be worn on the left or right ear. Follow the steps below to adjust. Do not attempt this while wearing.

